Quick Start/A4 03.6.10 0:46 PM Page 1

XE-A212 Quick Start Guide

English

For quick set-up, follow the steps shown below. Note that malfunction may occur if you do not follow the steps. For further information, please read the instruction manual. Before setting up your cash register, prepare three new R6 or LR6 batteries ("AA" size), which are necessary for memory backup, and find a stable surface near an AC outlet where the cash register is not subject to water sources or direct sunlight.

1 Installing the Cash Register

Install the cash register using the fixing angle bracket provided with the register.

1. Thoroughly clean the location where the fixing angle bracket (B) is to be placed.
2. Peel off the adhesive tape on the fixing angle bracket.
3. Hook the angle bracket onto the hook (A) that is located at the bottom rear of the register.
4. Firmly stick the fixing angle bracket to the table surface that your cleaned above.

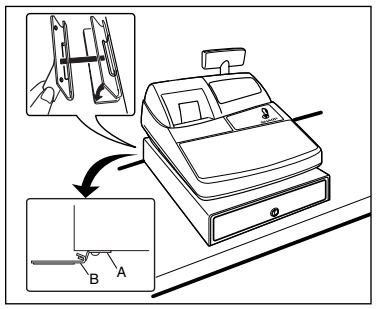

To remove the resister from the fixing angle bracket:

1. Lift up the front of the register and pull the register towards you.

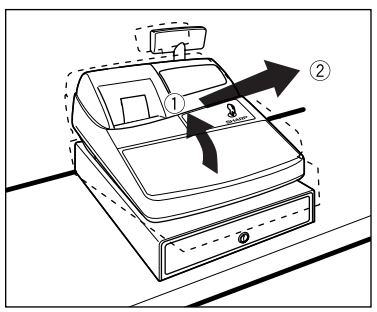

2 Preparing the Cash Register

Initializing the Cash Register

To ensure the cash register operates properly, initialize it using the following procedure.

1. Make sure the AC power cord is unplugged and batteries are not installed on the register.
2. Insert the manager (MA) key into the mode switch and turn it to the REG position.



3. Insert the plug of the AC power cord into the AC outlet. A buzzer will sound three times.

IMPORTANT: This operation must be performed without batteries installed.

4. The register display should now show "NO BATTERY".

NOTE: If the buzzer does not sound when the plug is inserted, the initialization has not been done successfully. Wait at least one minute after pulling out the plug, and insert the plug again.

Installing the Batteries

Install three new R6 or LR6 batteries ("AA" size) according to the procedure shown below with the power cord connected and set the mode switch to REG position.

1. Lift the rear of the printer cover and detach it.

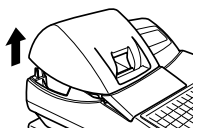

2. Open the battery compartment cover.

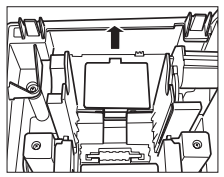

3. Install three new R6 or LR6 batteries ("AA"size) as per the diagram.
   When the batteries are properly installed "NO BATTERY" on the display will disappear.

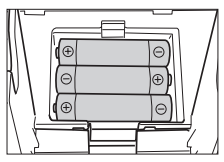

4. Close the battery compartment cover.

3 Installing the Paper Roll

(for receipt printing)

1. Lift up the print roller release lever to unlock and open the print roller arm

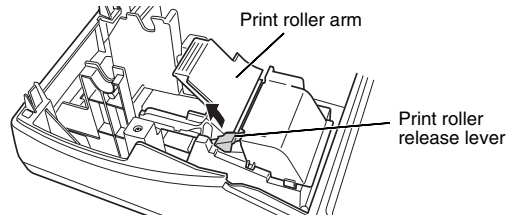

2. Set a paper roll in the paper roll cradle as per the diagram.

3. Feed the end of the paper along with the paper positioning guides as per the diagram.

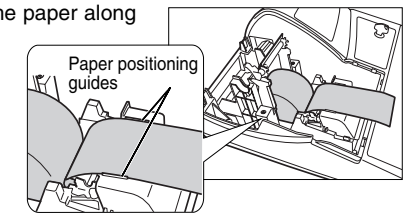

4. While keep holing down the paper, close the print roller arm slowly, and push down the arm until you hear a click sound to lock the arm. The paper will be fed automatically.

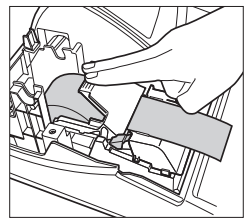

5. Cut off the excess paper using the edge of the inner cover, and replace the printer cover. Press the [↑] key to make sure the paper end comes out of the printer cover and clean papar face appears.

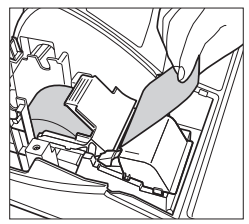

NOTE: If you want to use a paper roll for journal printing, please refer to GETTING STARTED section of the instruction manual.

4 Basic Programming

Set the mode switch to the PGM position.

Setting the Date

Enter the date in 8 digits using the day-month-year format. Then press [#].

Example: Date (26 August, 2003)

26082003 [#]

Setting the Time

Enter the time in 4 digits ("hhmm" format) using the 24 hour system. Then press [#].

Example: Time (2:30 p.m.)

1430 [#]

Setting the VAT

Set the VAT rate in seven digits (3-digit integer and 4-digit decimal).

Example: VAT1 rate 16%

[ST] 9 [⊗] 1 [⊗] 16 [⊗] [ST] [TL]

NOTE: Department 1 to 50 are set to VAT1 by default.

Other programming

While the cash register is preprogrammed so that it can be used with minimal setup, you may need to program some items such as department texts and logo message. For details of programming, please refer to the instruction manual.

5 Now, you are ready for sales entries.

Set the mode switch to the REG position, and start registration. For details of registration, please refer to the instruction manual.